



# Rat Rig

## 2.7. Spoiler Board Installation

Written By: Rat Rig

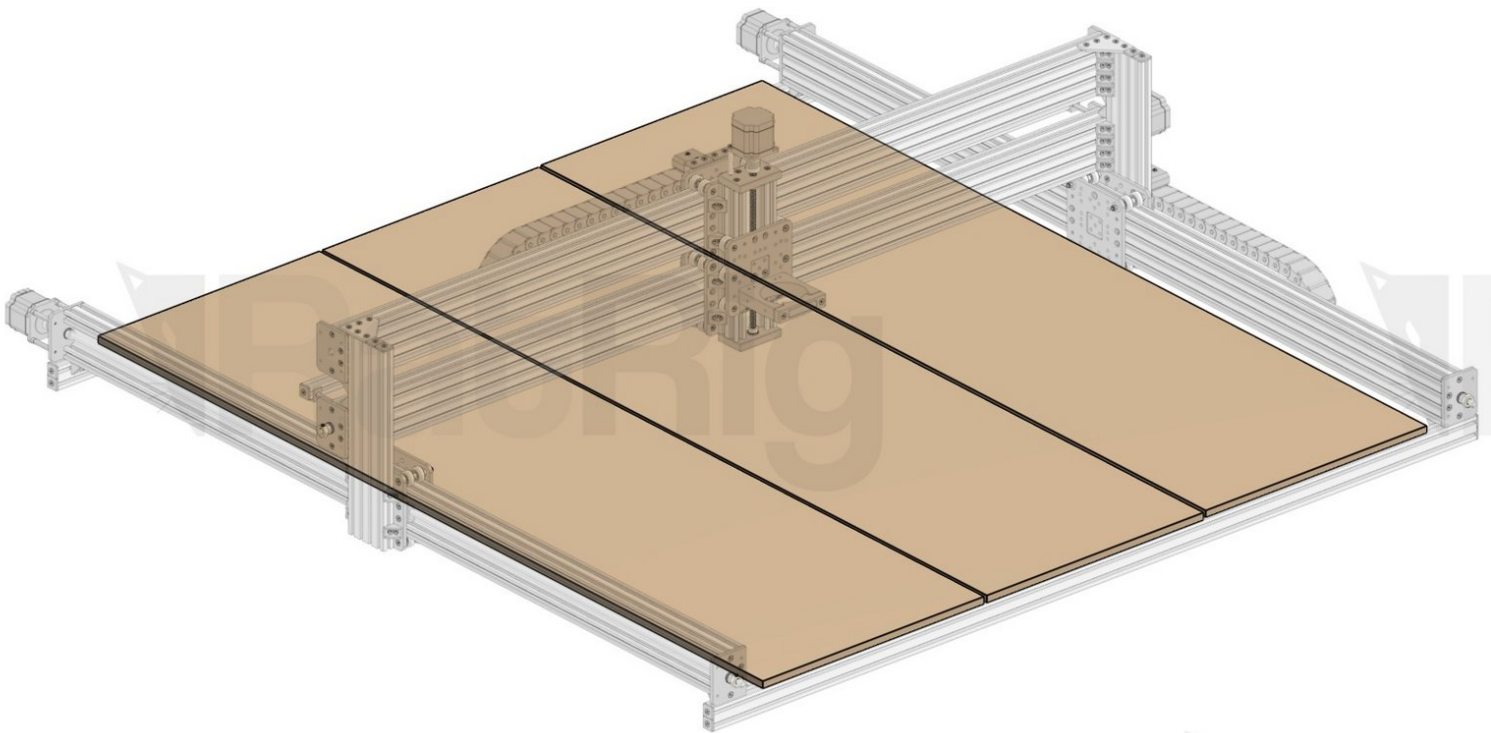


## Step 1 — Install Spoiler Board

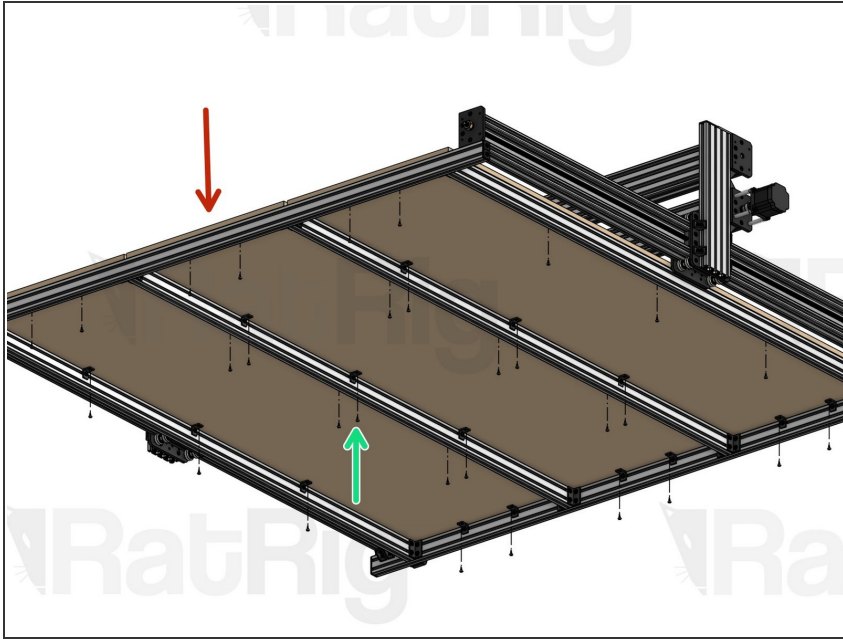

- Round Head Cutting Screws. Use them to attach the board to the Single L Brackets.

## Step 2 — Position Spoiler Boards

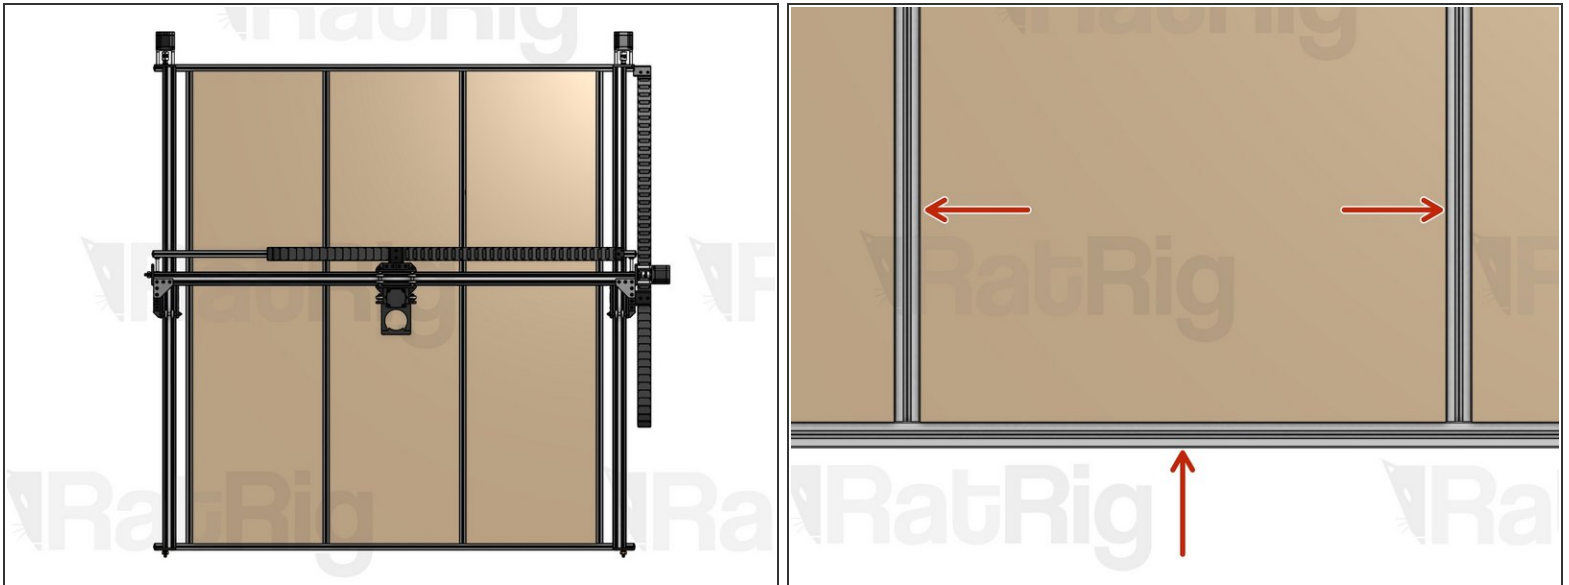

- On your local hardware store, source 3 boards with dimensions 406x1473mm
- Suggested board height is 12mm, but this is not a critical dimension, you can choose what suits you best.
- Suggested material: MDF
- Position the boards on top of your machine making sure you're not blocking the profile slots. You want to have access to the slots as mounting points for the materials you'll be cutting.