



# Rat Rig

## 05. Extras

Written By: Rat Rig

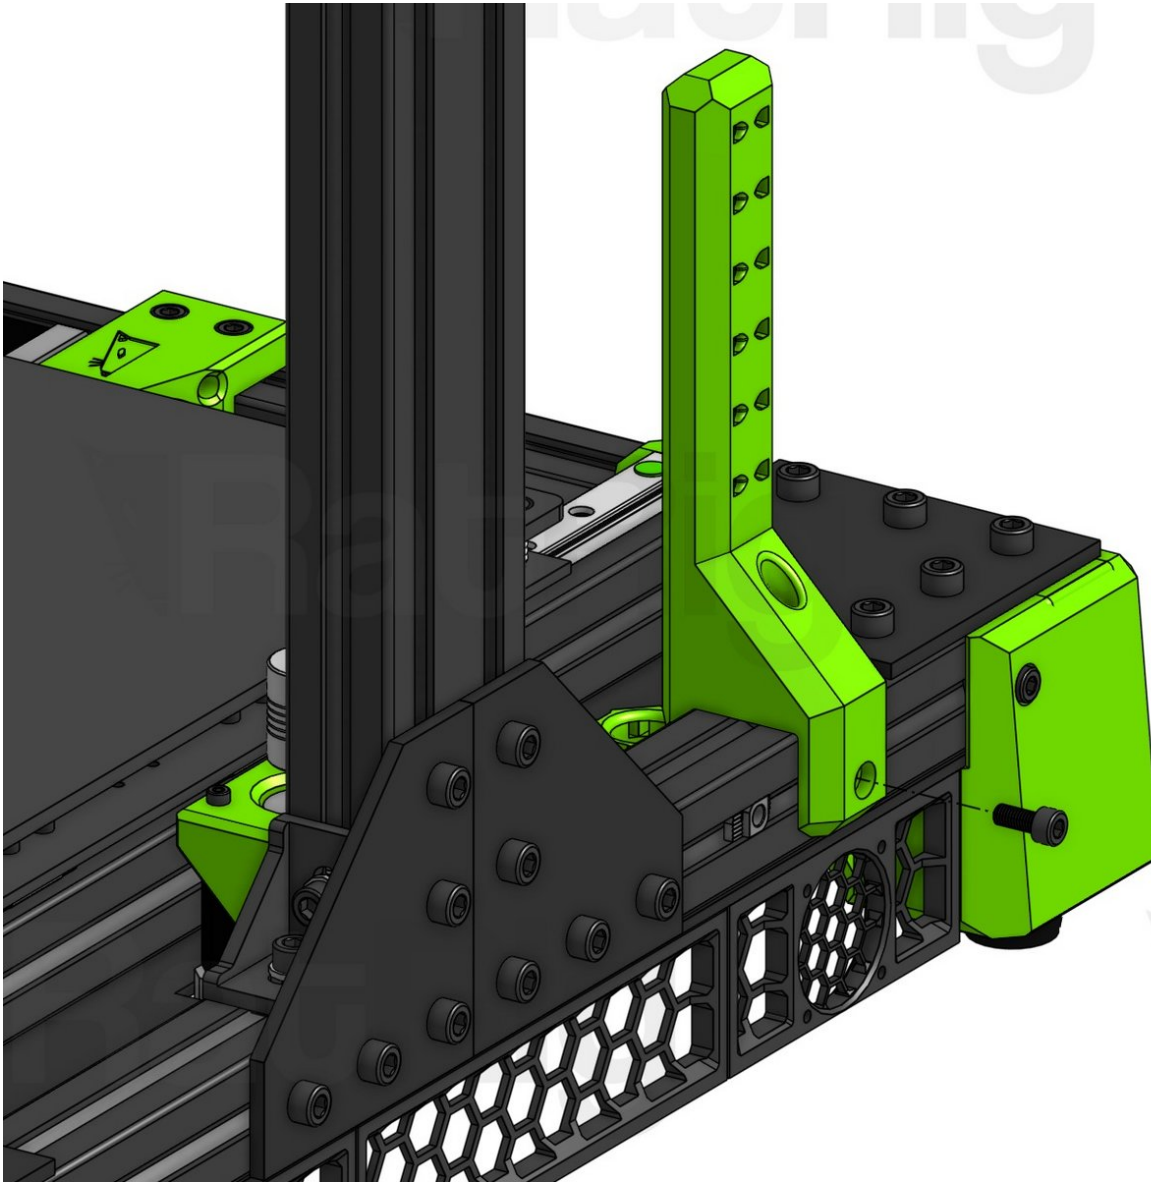


## Step 1 — Assemble the Cable Guide Support

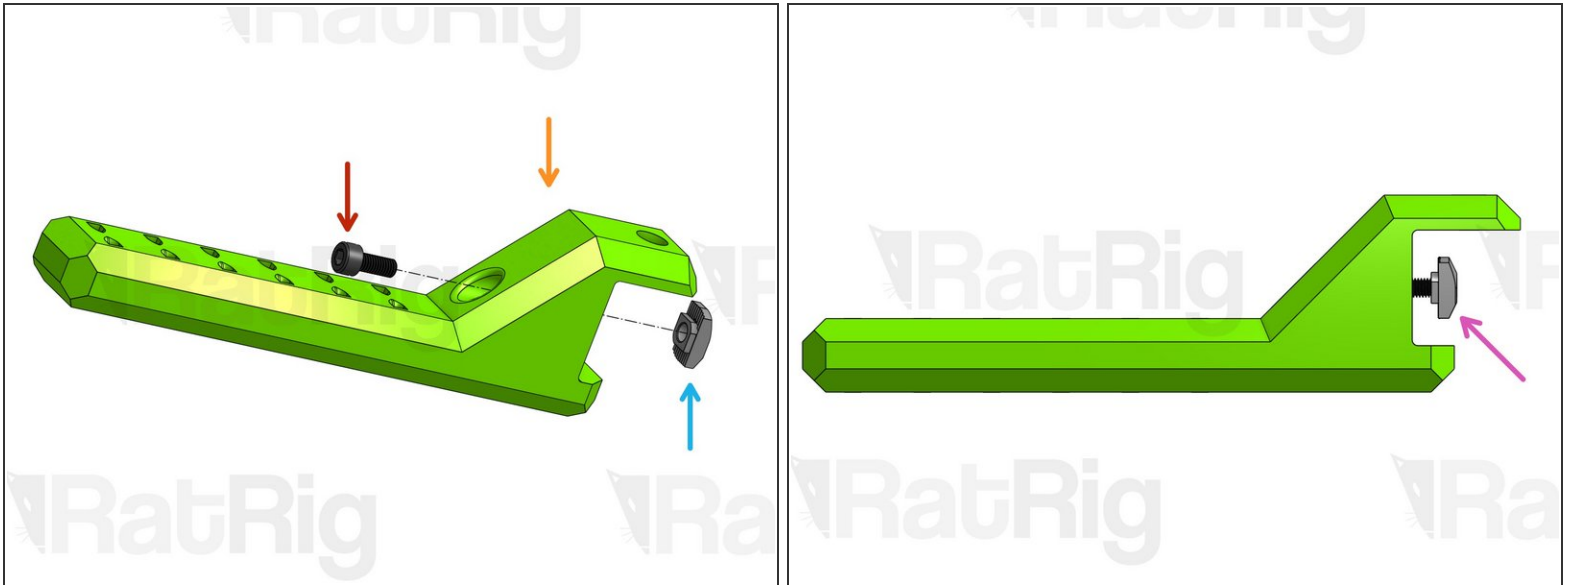

- Cap Head Screw M5x12mm
- Cable Guide Support
- 3030 Drop-in T-Nut M5
- Screw T-Nut into position, but don't tighten.

## Step 2 — Mount the Cable Guide Support

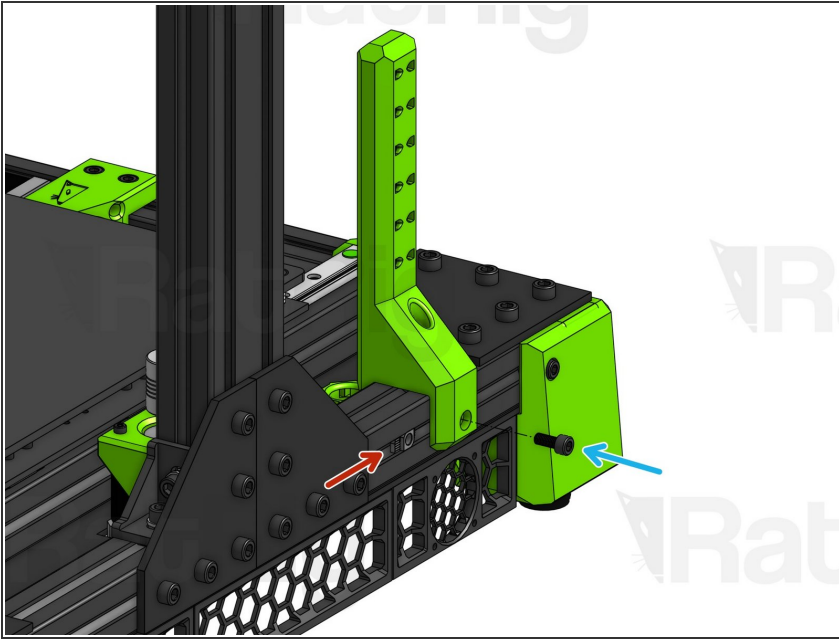

- Cap Head Screw M5x12mm
- 3030 Drop-in T-Nut M5 (slide it behind the plastic part)