Rat Rig

02. A - Bed Assembly: 6mm Cast Tooling Plate


Written By: Rat Rig





• 3mm Hex Key (1)

Step 1 — Assemble bed supports

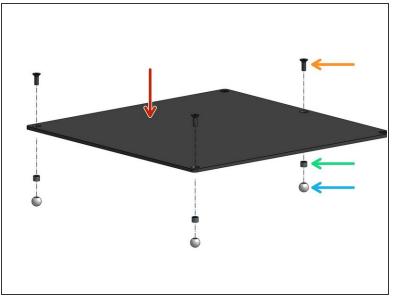



- 6mm Cast Tooling Plate
- Countersink Screw M5x16mm
- Spacer 6mm
- Steel Ball
- (i) Glue your heat pad to the underside of the bed and you're done!